

```
Trim, Side
1
      4450850
                  RH Black
      4450851
                  RH White
      4450853
                  LH Black
      4450854
                  LH White
                  Screw
      4449747
                  Black Model
      4449041
                  White Model
4
      4448520
                  Bumper, Door
6
      4451039
                  Divider, Vent
      4449809
                  Screw
7
                 Partition
      4451166
      4449809
                  Screw
9
      4449009
                  Tube, Vent
      4449154
                  Screw
     4450706
11
                  Oven Light Assy
14
      4450417
                  Frame, Front
      4449040
                  Screw
      4450118
                  Nut
15
                  Gasket, Door
      4449372
                  Support, Insulation
19
      4450542
25
                  Side, Chassis (R.H. & L.H.)
      4450528
      4449809
                  Screw
26
      4451169
                  Back, Chassis
      4449809
                  Screw
27
                  Liner, Oven (Not serviceable)
29
      4450026
                  Sensor
      4449154
                  Screw
31
      4450819
                  Switch, Door
32
      4449369
                  Vent Box Assy.
      4449809
                  Screw
37
      4450249
                  Thermostat (TOD) (Temp.) SPST
      4449809
                  Screw
                  Base, Chassis
43
      4451398
      4449809
                  Screw
49
      4448933
                  Retainer, Gasket
      4449154
                  Screw
50
      4450544
                  Cover, Back
      4449809
                  Screw
                  Trim, Bottom
51
      4448477
                  Black Model
                  White Model
      4448478
      4450289
                  Screw
53
      4449845
                  Support, Bracket
      4449809
                  Screw
54
      4451002
                  Spacer, Harness
      4449809
                  Screw
```

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449316	Insulation,	Wrap
4450365	Insulation,	Back

UPPER OVEN PARTS

4	4440500	D
4	4448520	Bumper, Door
6	4451039	Divider, Vent
7	4449809	Screw
7	4451166	Partition
0	4449809	Screw
9	4449009	Tube, Vent
	4449154	Screw
11	4450706	Oven Light Assy
14	4450417	Frame, Front
	4449040	Screw
	4450118	Nut
15	4449372	Gasket, Door
19		Support, Insulation
	4449809	Screw
21		Rail, Side
	4450581	Right Side
	4450582	Left Side
	4448444	Grommet
	4449154	Screw
25	4450528	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4451169	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)
29	4450026	Sensor
	4449154	Screw
31	4450819	Switch, Door
32	4449369	Vent Box Assy.
	4449809	Screw
34	4449052	Vent, Center
37	4450934	Thermostat (TOD) (Temp.) SPST
49	4448933	Retainer, Gasket
	4449154	Screw
50	4450544	Cover, Back
	4449809	Screw
53	4449845	Support, Bracket
	4449809	Screw
54	4451002	Spacer, Harness
	4449809	Screw


FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449316	Insulation,	Wrap
4450365	Insulation,	Back


OVEN DOOR PARTS

For Models: RBD307PDB2, RBD307PDQ2 (BLACK) (DESIGNER WHITE)

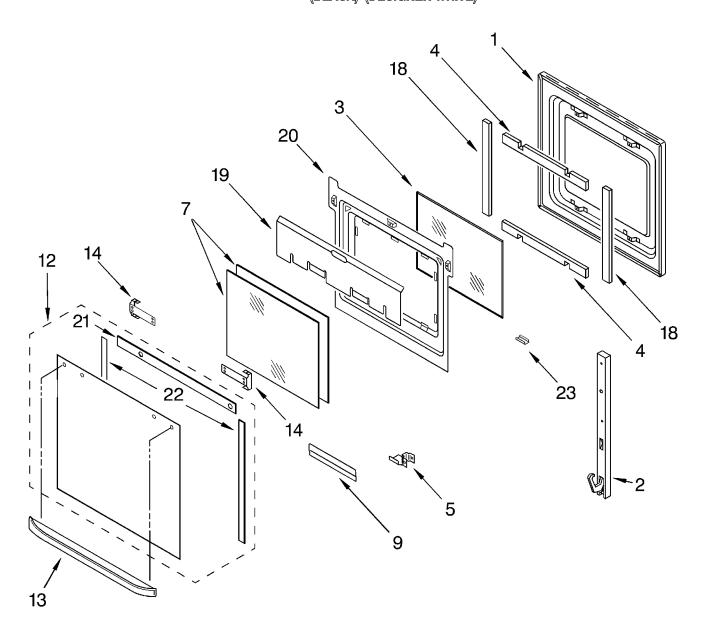


1	4450429	Door Liner
2	4451174	Hinge, Door
	4449743	Screw
3	4449259	Glass, Inner
4	4448680	Insulation, Top and Bottom Door
5	4450470	Retainer, Glass
	4449809	Screw
7	4449263	Glass, Inner (2)
9	4449031	Retainer, Glass
	4449809	Screw
12		Door Glass, Outer
	4450691	Black Model
	4450692	White Model
13		Door Handle
	4448854	Black Model
	4448855	White Model
14	4450813	Bracket, Handle
	4451040	Screw
18	4448707	Insulation, Sides
19	4450362	Shield, Heat
	4449809	Screw
20	4450423	Retainer, Glass
	4449809	Screw
21	4450837	Seal, Door Top
22	4450838	Seal, Side
23		Retainer, Clip
	4450863	Black Model
	4450864	White Model

LATCH PARTS For Models: RBD307PDB2, RBD307PDQ2 (BLACK) (DESIGNER WHITE)

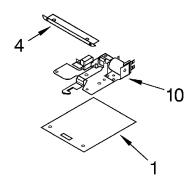

1	4451036	Shield, Latch
	4450289	Screw
4	4450051	Deflector, Latch Upper Latch Only
	4449154	Screw
10	4454710	Latch Assy.


INTERNAL OVEN PARTS For Models: RBD307PDB2, RBD307PDQ2 (BLACK) (DESIGNER WHITE)

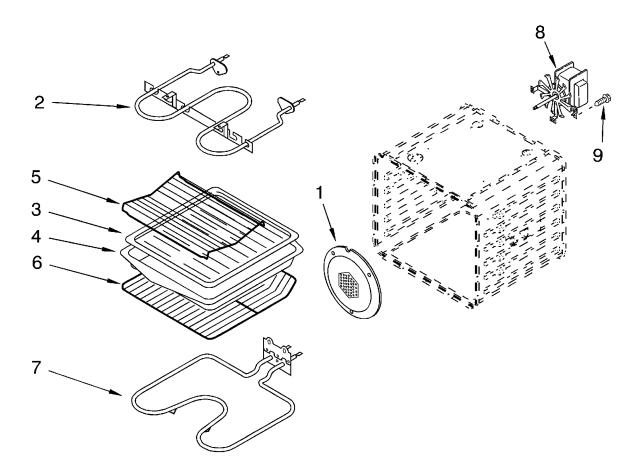

1	4448988	Cover, Fan
	4449154	Screw
2	4448698	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
5	3181534	Rack, Roasting
6	4448717	Rack, Oven
7	4448696	Element, Bake
	4449154	Screw
8	4448952	Fan, Convection
9	4449154	Screw

CONTROL PANEL PARTS

For Models: RBD307PDB2, RBD307PDQ2 (BLACK) (DESIGNER WHITE)

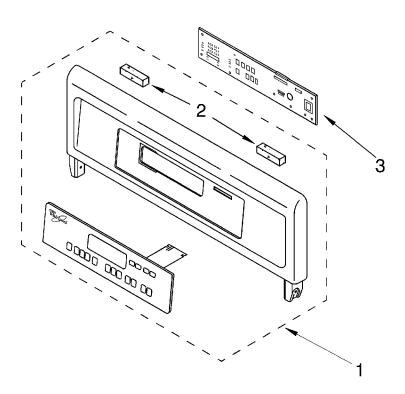


1		Control Panel Assy W/Membrane, Switch
	4451319	Black Model
	4451320	White Model
2	4451034	Gasket,
	4449899	Screw Control Panel
3	4448876	Microcomputer
	4449745	Screw

LITERATURE PARTS

LIT4450411 Installation Instructions LIT4450569 Use & Care Guide (Oven) LIT4454767 Tech Sheet (Oven) LIT4449237 Cookbook, WP Conv.

TOP VENTING PARTS For Models: RBD307PDB2, RBD307PDQ2 (BLACK) (DESIGNER WHITE)

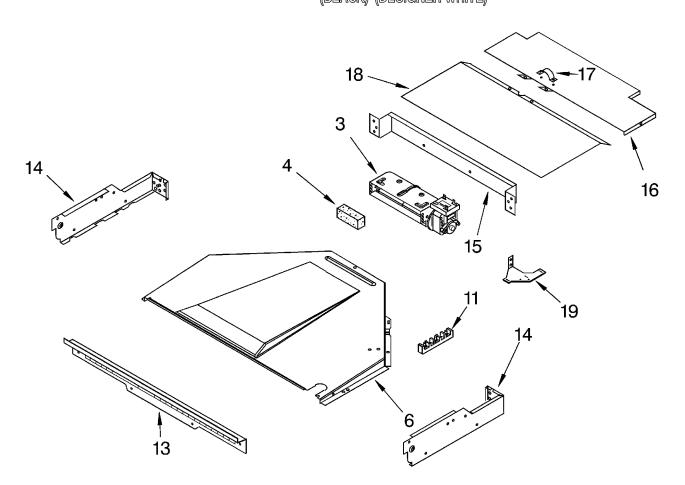

```
3
      4450920
                  Blower, Upper/Lower
4
      3182384
                  Foam, Block
      4450367
                  Exhaust Duct
      4449809
                  Screw
11
      4449868
                  Block, Terminal
      3196181
                  Screw
13
      4448549
                  Vent, (Control Panel)
      4450038
                  Screw
14
                  Side, Control Top
      4448371
                  Right
      4448372
                  Left
      4449809
                  Screw
      4449154
                  Screw
15
      4450658
                  Back, Control
      4449809
                  Screw
      4450551
16
                  Cover, Top Rear
      4449809
                  Screw
17
      4448664
                  Clamp
      4449809
                  Screw
      112432
                  Nut
18
      4450554
                  Cover, Top Front
      4449809
                  Screw
19
      4450545
                  Bracket, Blower
      4449809
PAINT, TOUCH-UP (1/2oz.)
      72017
                  White
      261869
                  Cord Brown
      72032
                  Black
PAINT, SPRAY
      350930
                  White
      261900
                  Citrine White
      830864
                  Black
ADHESIVE
                  Adhesive Loctite (1/3 oz.)
      591014
      482338
                  Sealer, Silastic (3 oz.)
SPLICING WIRES--25FT. LENGTH
                  Wire (12 Ga. 150 c Black)
      242828
      242820
                  Wire (14 Ga. 150 c Black)
      242821
                  Wire (14 Ga. 150 c Blue)
                  Wire (14 Ga. 150 c Brown)
      242822
                  Wire (14 Ga. 200 c Brown)
      242830
                  Wire (14 Ga. 150 c Green)
      242823
                  Wire (14 Ga. 150 c Orange)
      242824
                  Wire (12 Ga. 150 c Red)
      242829
                  Wire (14 Ga. 150 c Red)
      242825
      242831
                  Wire (14 Ga. 200 c Red)
      242826
                  Wire (14 Ga. 150 c White)
      242827
                  Wire (14 Ga. 150 c Yellow)
      242832
                  Wire (14 Ga. 200 c Yellow)
```

```
WIRING HARNESS PARTS
      4450951 Harness, Wire S/C (Door Switch)
488366 Clamp
4449809 Screw
4454709 Harness, Wire (Latch)
      488366
                  Clamp
      4449809
                  Screw
                  Harness, Wire (Main)
      4454700
                Conduit, Double
Screw
      4450953
      4450800
      4448664
                  Clamp
      4449809
                  Screw
      112432
                  Nut
      4450814 Fuse Assy (Service Only)
Miscellaneous
      814381 Pin Hinge Kit
814387 Roll Tape, Exhaust Duct
      4448950
                  Screw, Install (4)
```